


Com 308 A/V System

Contact Shannon for key authorization X5896

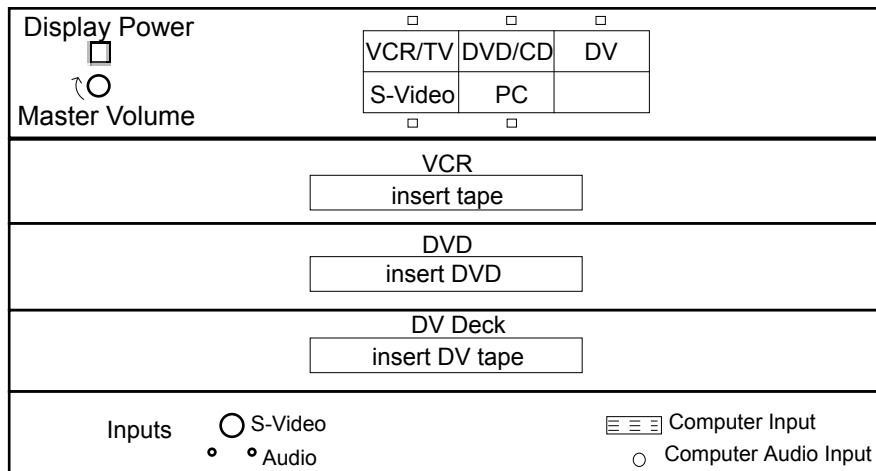

To watch a DVD: Press the *Display Power button* for two seconds. Let go and it will start flashing, indicating the projector has been powered and is warming. Press the *DVD button* above the blue DVD light. You can control the volume with the Master Volume Knob. If needed, the remote controls are in the Info Office, room 302A.

To watch a VHS: Press the *Display Power button* for two seconds. Let go and it will start flashing, indicating the projector has been powered and is warming. Press the *VCR/TV button* above the blue VCR/TV light. Change the VCR to L1 in order to watch a VHS tape. You can control the volume with the Master Volume Knob. If needed, the remote controls are in the Info Office, room 302A.

To listen to music: Do not turn the display power button on. Insert the CD into the DVD player and press the *DVD/CD button* above the blue light. Or insert the cassette into the cassette player and press the button beneath the cassette light. Control the volume with the Master Volume.

To display from a laptop: Use the RGB cable to plug into your computer and into the Computer Input. To play sound from your computer also plug in a mini 1/8" audio cable into the Computer Audio Input. Press the *Display Power button* for two seconds. Let go and it will start flashing, indicating the projector has been powered and is warming up. The projection screen controls can be found behind the stage. Press the *Computer button* above the blue Computer light. You can control the volume with the Master Volume Knob as well as using the volume control on your laptop.

WHEN YOU ARE FINISHED: Press Display Power for two seconds. It will start flashing - indicating it is powering down. All other equipment will go to sleep in a few minutes. **Lock up!**

For technical assistance, call Electronic Media at 867-6270
or Media Loan at 867-6253.